

# ***Geo Loop Conditioner Directions***

***SHAKE WELL BEFORE USING***

**DO NOT USE IF A STRAINER IS INSTALLED IN SYSTEM**

**QUANTITY TO USE:** Use one 8oz bottle per system - up to 1200 gallons

Premix Geo-loop Conditioner with 8-16 oz of water.

With loop pump running, in continuous mode, pump Geo-Loop Conditioner into system. After loop conditioner has been introduced to the system, build system pressure to 60 psi or higher. **\*\* DO NOT EXCEED 160 psi \*\*** Circulate for 24 hours - Then return the system to normal operating mode. Check system psi in two (2) weeks for pressure drop. Treatment can be repeated if necessary.

## **PRECAUTIONS**

KEEP OUT OF REACH OF CHILDREN. CAUSES SEVERE EYE AND SKIN IRRITATION. DO NOT GET IN EYES, ON SKIN OR ON CLOTHING. HARMFUL OR FATAL IF SWALLOWED. AVOID CONTAMINATION OF FOOD. RINSE EMPTY CONTAINER THOROUGHLY WITH WATER AND DISCARD.

## **FIRST AID**

IN CASE OF CONTACT, IMMEDIATELY FLUSH EYES OR SKIN WITH PLENTY OF WATER FOR AT LEAST 15 MINUTES. FOR EYES, CONTACT A PHYSICIAN. REMOVE AND WASH CONTAMINATED CLOTHING BEFORE REUSE. IF SWALLOWED, DRINK MILK, EGG WHITES, OR GELATIN SOLUTION. IF THESE ARE NOT AVAILABLE, DRINK LARGE QUANTITIES OF WATER. CALL A PHYSICIAN IMMEDIATELY

**Notes:** Geo-Loop Conditioner has been thoroughly field tested and has proven to be effective in sealing leaks. Geo-Loop Conditioner is also an excellent preventative maintenance aid, as it coats all surfaces it comes in contact with. It cuts down on the formation of rust and corrosion. Geothermal Supply Co. Inc., or its agents, do not assume responsibility for the performance of this product.