

Super Dooper Inducer

Operation & Instruction Manual



Operating Instructions

To Pressurize System:

1. Remove 0.50" Plug from top of Reservoir.
2. Fill Reservoir with water (or Mixture) until Sight glass shows full.
3. Pump until Air is purged out of Hose.
4. Lubricate probe and insert into P/T Port.
5. With top plug removed, pump water in slowly until desired pressure is reached.
** To Regulate Water Flow, adjust Black Valve on side of Pump**
6. Refill Reservoir as needed.
** DO NOT LET LEVEL IN RESERVOIR FALL BELOW SIGHT GLASS - AIR MAY BE INTRODUCED INTO SYSTEM**

To Add Geo-Loop Conditioner:

1. Mix (1)one bottle of Geo-Loop Conditioner with 16oz of water in a separate container and Shake Well for (2)two minutes or until uniform consistency.
2. Follow Steps 1 - 5 above.
3. With top plug removed, pump mixture slowly until Sight glass shows empty
** DO NOT LET LEVEL IN RESERVOIR FALL BELOW SIGHT GLASS - AIR MAY BE INTRODUCED INTO SYSTEM**
4. Refill Reservoir with water and pump remaining mixture into system.
5. When all Geo-Loop Conditioner has been added, remove probe and pump (1)one gallon of clean water through the pump to remove all Geo-Loop Conditioner residues.



FAILURE TO PROPERLY FLUSH OUT THE PUMP WITH CLEAN WATER AFTER PUMPING IN GEO-LOOP CONDITIONER MAY CAUSE SOME BLOCKAGE IN THE PUMP COMPONENTS AND PISTON FAILURE. PROPERLY DRAIN AND STORE SUPER DOOPER INDUCER IN A LOCATION THAT WILL NOT BE SUBJECT TO FREEZING TEMPS.



The Warnings, Cautions and Instructions discussed in this Operating Manual cannot cover ALL possible conditions or situations that could occur. It must be understood by the Operator that Common Sense and Caution are factors which cannot be built into this product, but must be supplied by the Operator.