

Super Dooper Inducer - Operating Instructions

To Pressurize System:

1. Remove ½" plug from top of reservoir
2. Close valve on side of pump
3. Fill reservoir with water (or mixture) until sight glass shows full
4. Open valve and pump until air is purged out of hose
5. Lubricate probe and insert into p/t port
6. With top plug removed, pump water in slowly until desired pressure is reached
7. Refill reservoir as needed

**DO NOT LET LEVEL IN RESERVOIR FALL BELOW SIGHT GLASS
- AIR MAY BE INTRODUCED INTO SYSTEM**

To Add Geo-Loop Conditioner:

1. Mix one bottle of Geo-Loop Conditioner with 16 oz. of water in a separate container and shake well for 2 minutes or until uniform consistency
2. Follow steps 1-5 above
3. With top plug removed pump mixture in slowly until sight glass shows empty
**DO NOT LET LEVEL IN RESERVOIR FALL BELOW SIGHT GLASS
- AIR MAY BE INTRODUCED INTO SYSTEM**
4. Refill reservoir with water and pump remaining mixture into system
5. **When all Geo-Loop Conditioner has been added, remove probe and pump one gallon of clean water through the pump to remove all Geo-Loop Conditioner residues**

WARNING! WARNING! WARNING!
FAILURE TO PROPERLY FLUSH OUT PUMP WITH CLEAN WATER AFTER PUMPING GEO-LOOP CONDITIONER MAY CAUSE BLOCKAGE IN PUMP COMPONENTS AND PISTON FAILURE

